

WOCA Maintenance Paste

- Initial- and regular maintenance care for all oiled surfaces



Preparing today for tomorrow



- For the maintenance of all oiled wood floors
- Simple application both manually or by machine
- Certified by IBR

Product info

Container: 400 ml tube

Consumption: 60-80 m²/tube
(for UV oiled floors approx 120 m² /tube).

Available in natural and white



Application area

Maintenance Paste is supplied in a very handy tube. Because of its texture the paste is easy to apply. Maintenance Paste is used for the maintenance and preservation of all oiled wood surfaces. The paste is especially suitable for industrially oiled wood floors - herunder also UV-oiled floors. Maintenance Paste Natural is suitable for dark wood types, whereas Maintenance Paste White is used for light, possibly lye treated floors such as pine, ash or oak.

Result

The Paste provides the floor with a dirt- and water resistant surface which is very hard-wearing.

Application

Maintenance Paste may be applied and buffed manually with a white pad or with a polishing machine.

After care

Not required.


Maintenance and cleaning

Maintenance cleaning with Natural Soap. Basic Cleaning with Wood Cleaner.

Maintenance with Maintenance Oil/-Paste.

How to do...

- WOCA Maintenance Paste:
Initial- and regular maintenance care for all oiled surfaces

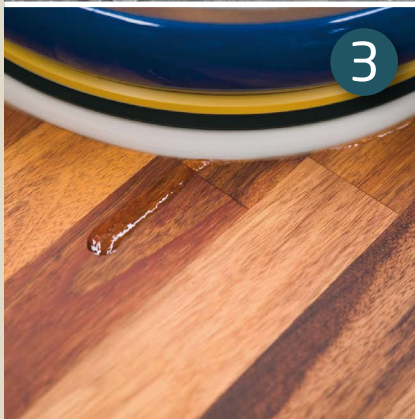

Tools

Polishing machine for the application with machine and doodlebug for manual application. Cotton cloths.

Clean tools with Solvent.

Please notice!!

Risk of self-ignition! Due to the risk of self-ignition it is important that sanding dust and oil wetted cloths are soaked in water and disposed of in a tightly closed container after use.

Maintenance Paste is for the re-freshening and maintenance of oiled wood floors. The Maintenance Paste is also especially suitable for UV-oiled floors.

Before a new floor is taken into use it is recommended to buff it - both industrially oiled floors and on site oiled floors. The final buffing gives a hard-wearing surface and may take place either by hand or with machine.

Oiled floors should be maintained regularly - normally once a year, but more often when it comes to floors exposed to extremely hard wear. The maintenance may be done only partially.

- 1 Clean the floor with 125 ml Wood Cleaner mixed into 5 litre water. Leave the floor to dry for at least 8 hours. The floor must be completely dry.
- 2 Apply thin coat of Maintenance Paste onto 1-2 m² floor at the time with white polishing pad or cotton cloth. Use floor machine for distribution of Maintenance Paste for large areas.

- 3 Make sure that the Maintenance Paste is polished uniformly into the wood. Buffing continues until wood appears saturated and silk-mat. Apply more paste if necessary.
- 4 If a very mat finish is required, make buffing with cotton cloths under polishing pad.
Let surface rest for 4 hours. Do not expose floor to water for 48 hours after finishing.