

WOCA Wood Lye

- Lye priming of softwood and light hardwood



Preparing today for tomorrow



- For a lighter finish, reduces yellowing process of the wood
- Requires subsequent treatment with oil, lacquer or soap
- Suitable for any type of wood
- Certified by IBR

Product info

Container: 2,5 litre

Available in white and grey

Consumption: 8-10 m²/litre depending on wood type



Application area

To be used on new or freshly sanded wood floors. Wood Lye may be applied on solid floors as well as on engineered floors. Wood Lye is available in white and grey.

Result

Wood Lye White gives the wood floor a white washed finish, and Wood Lye Grey a grey washed finish.

Application

Apply the Lye lengthwise the wood grain with a stiff brush or a lye-wiper. Clean with Wood Cleaner after 1-2 hours.

After care


Requires a subsequent finishing treatment with oil, lacquer or soap.

Maintenance and cleaning

According to the chosen finishing treatment.

How to do...

- WOCA Wood Lye:
Lye priming of softwood and light hardwood

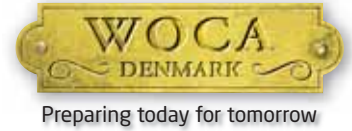

Tools

Nylon brush, plastic bucket and stick for stirring.

Wear suitable protective clothing, gloves and eye/face protection.

Clean tools with water and soap.

Wood Lye may be used anywhere indoors for new or freshly sanded solid softwood or light hard wood (beech, oak, birch, maple, hevea) of min. 16 mm. Wood Lye bleaches the wood and prevents the yellowing process of the wood. It is recommendable to make a test in a non-visible place to evaluate the result.

Wood Lye bleaches solid wood floors and engineered floors of solid wood and is especially used for beech, oak, birch, maple, hevea and other types of softwood or light hardwood.

1 The unfinished woodwork must be well sanded, clean and dry before application of lye. Clean with 125 ml Wood Cleaner mixed with 5 litre water. Shake the container well and pour the lye into a plastic bucket and stir regularly during application to get a uniform finish. Stir the lye regularly during the work.

2 Apply the lye undiluted with a nylon brush in an even coat on the floor lengthwise. Use at least 1 litre of lye per 10 m². On vertically mounted woodwork, apply from top to bottom. Rinse work tools clean in water. When woodwork is dry, remove any visible lime pigments from the surface. Possibly clean with Wood Cleaner or polish with green pad under floor machine and subsequently vacuum clean the floor. Lye primed wood floor may after a drying time of approx. 8 hours at 20° C (the wood must be completely dry) be oiled with Wood Floor Oil, Master Oil, Colour Oil or High Solid Master Oil or soaped with Natural Soap. The surface may also be finished with Wood Floor Lacquer or Oil Lacquer.